

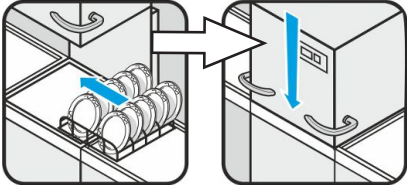
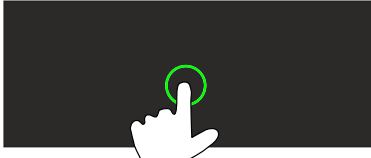
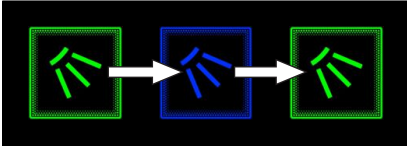
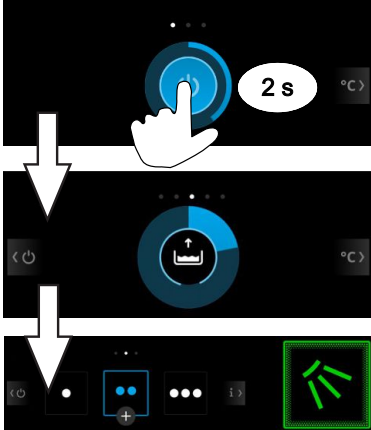
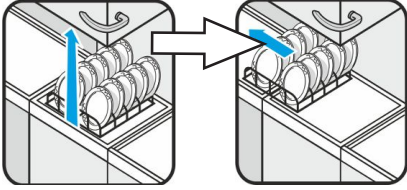
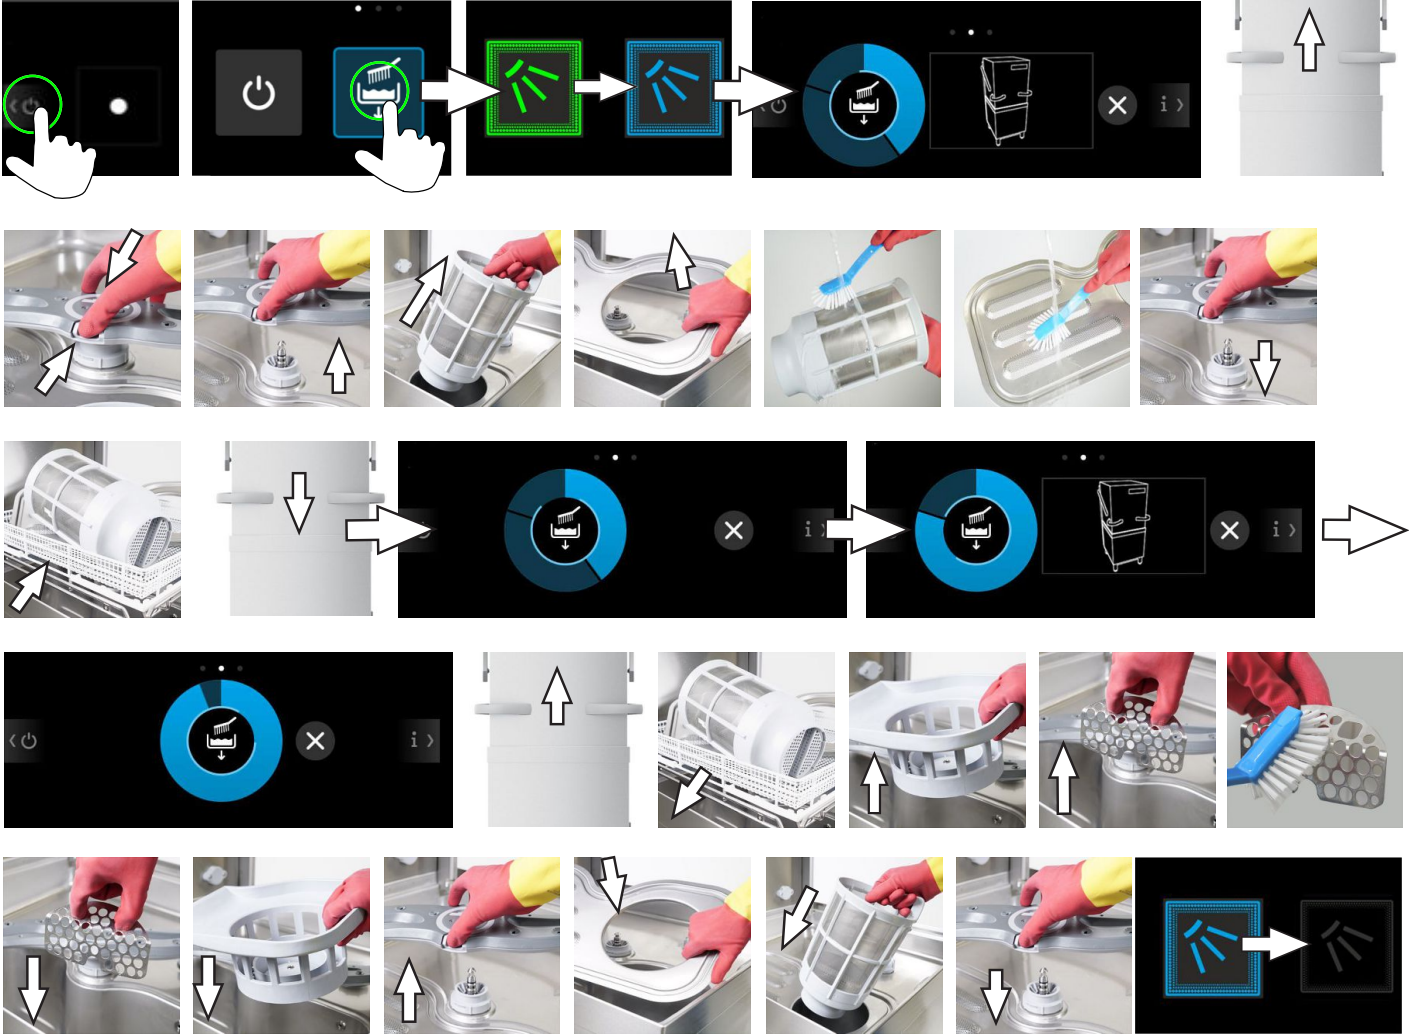


	Vklop pomivalnega stroja	Pomivanje
	<p>1</p> 	<p>1</p> 
	<p>2</p> 	<p>2</p> 
	<p>3</p> 	<p>3</p> 

Izklop in čiščenje pomivalnega stroja



The sequence consists of the following steps:

- Pressing the power button on the control panel.
- Pressing the stop button (represented by a fan icon) on the control panel.
- Pressing the stop button for 2 seconds, indicated by a '2s' timer on the panel.
- Opening the dishwasher door.
- Removing the upper cutlery tray.
- Removing the lower cutlery tray.
- Removing the filter assembly from the bottom of the dishwasher.
- Cleaning the filter assembly with a brush.
- Cleaning the spray arm.
- Cleaning the door gasket.
- Reinstalling the filter assembly.
- Reinstalling the lower cutlery tray.
- Reinstalling the upper cutlery tray.
- Pressing the stop button on the control panel.

Čiščenje spodnjega in zgornjega pomivalnega polja



Čiščenje spodnjega in zgornjega nosilca pomivalnega polja



Dodajanje soli



Zamenjava kanistra s pomivalnim sredstvom



Zamenjava kanistra z izpiralnim sredstvom



Več informacij: Glejte navodila za uporabo
www.winterhalter.com/download-centre